


# Surface Mount Kit for BMA CT, BMA CTH and BMA 360

To install the surface mount kit, first assemble the frame, and then attach the frame to the ceiling.


### Step 1

On each end of one frame piece, insert a spring clip into the inside channel.

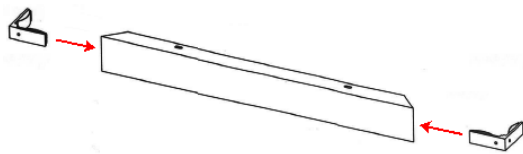

### Step 2

At each end of the frame piece from step 1, slide the inside channel of another frame piece onto the clip to form a u-shape.

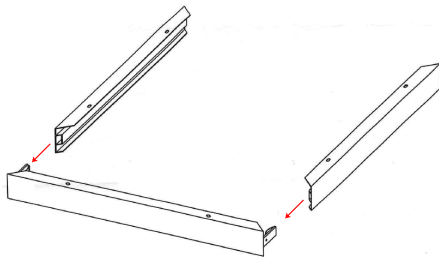


### Step 3

Lift the u-shaped frame into place against the ceiling. Attach the frame to the ceiling.



**Caution! Attach the frame to the ceiling in accordance with all applicable local codes.**

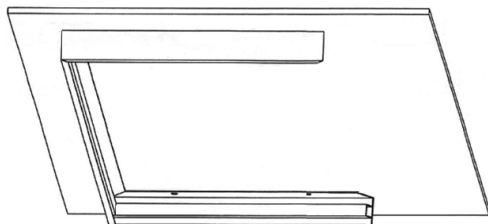

### Important!

- Examine shipment and report damage to your transportation carrier.
- Install in accordance with all applicable local codes.
- Ensure that power is off before you start installation.

### Part Number:


- 910-3200-210
- 910-3200-210-I (International)

### Included Components:

- Frame piece (4)
- L-shaped spring clip (4)
- M4X30 self-tapping screw (4)

### Step 4


Attach cables to ports on the back of the BMA. Then slide the BMA onto the recessed edges of the frame.

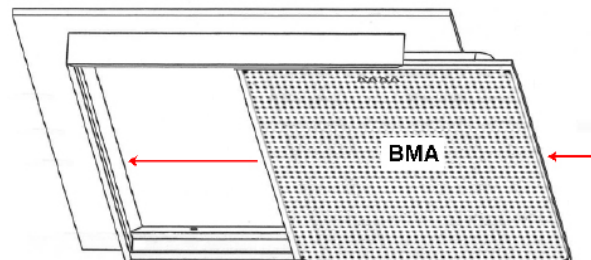

### Step 5:

On each end of the remaining frame piece, insert a spring clip into the inside channel.

Push the spring clips into the channels of the mounted u-shaped frame.

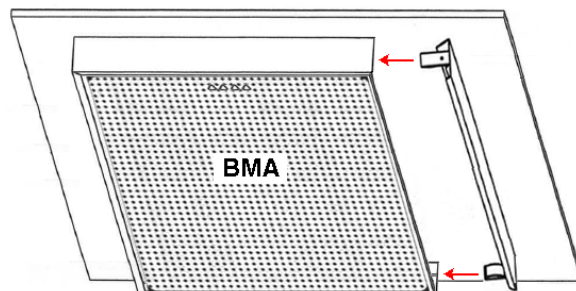

## ClearOne Contacts

### Headquarters

5225 Wiley Post Way  
Suite 500  
Salt Lake City, UT 84116

### Sales

Tel: 801.975.7200  
e-mail: sales@clearone.com

### US & Canada

Tel: 801.975.7200  
Fax: 801.303.5711

### Technical Support

Tel: 801.974.3760  
e-mail: tech.support@clearone.com

### International

Tel: +801.974.3621  
e-mail: global@clearone.com